


Drawer Assembly

METABOX 326-C15 Series


Box Assembly

1. Insert drawer bottom onto tabs.
2. Place drawer back into position.
3. Insert screws through back side flanges and into drawer back.

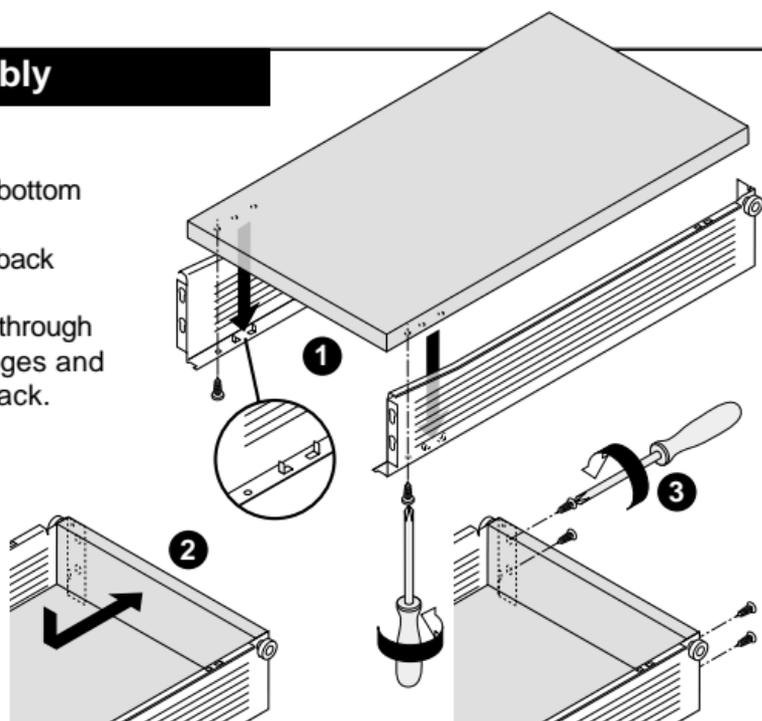

Drawer Front Assembly

1. Insert screws into back of drawer front.
2. Lock drawer front into flange key holes.
3. Tighten screws clockwise to lock.

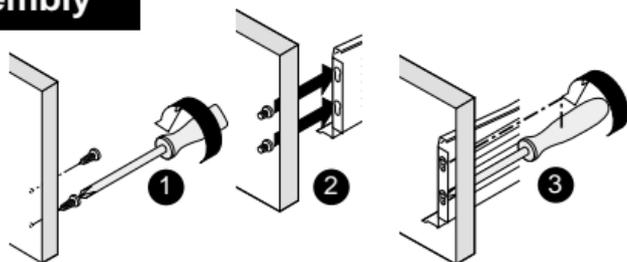

Drawer Front Adjustment

1. Loosen screws in back of drawer front.
2. Adjust drawer front up or down and side-to-side.
3. Retighten screws after adjustment.

